



FLAT-BACK RAIN BARREL

INSTRUCTIONS


August 25, 2014
Revision 5



Spigot Assembly

1. Place supplied teflon tape on threads nearest the hex end of spigot
2. Screw spigot (end with hexagonal feature) into pre-threaded opening in front of the Flat Back Rain Barrel.
3. Thread spigot until the hex face touches the barrel. Do not over tighten beyond the point where another turn is not possible.
4. Adjust spigot until vertical relative to the barrel.

TO PREVENT STRIPPING BARREL THREADS, LAY THE BARREL FLAT BACK DOWN TO INSTALL THE SPIGOT.

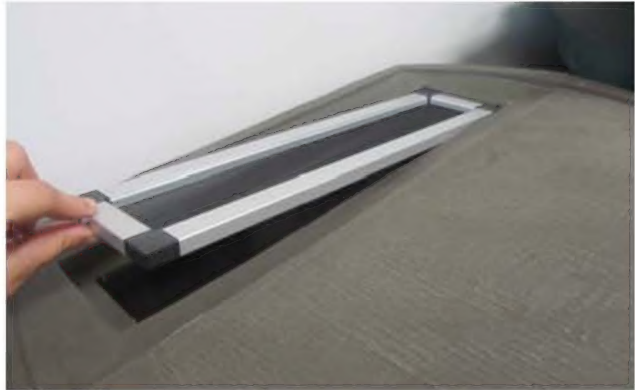

Screen Installation

5. Locate the screen and set into recessed section on top of the Flat-Back Rain Barrel.

NOTE: If you plan to leave your Rain Barrel outside over the winter it is very important to winterize your Flat-Back Rain Barrel as follows:

- a) Drain your Rain Barrel.
- b) Remove the screen and place inside the Rain Barrel.
- c) Turn the Rain Barrel upside down and set in desired location, preferably in a garage or basement. Failure to comply with these winterization instructions may result in a voided warranty.

NOTE: NO MORE THAN A 3 FOOT STANDARD GARDEN HOSE SHOULD BE USED FOR PROPER WATER FLOW.

RTS Companies Inc. warrants its products to be free from defects in materials and workmanship under normal use and service for the period of one year. All warranty periods begin on the date of invoice. This warranty does not cover defects, which are merely cosmetic, but is limited to defects, which result in structural failure, including structural failure due to material corrosion or deterioration. This warranty does not cover damage due to vandalism, abuse, lack of maintenance or improper installation. RTS Standard Terms and Conditions apply.